How to open and fold


The chair arrives folded flat. Opening it takes four steps. Folding is the same steps in reverse.

Before you start

- Mind your fingers. The X-joints and the hinges can trap fingers while the chair opens or folds. Hold the arms and tubes, away from the joints.
- Keep children and pets away while you open or fold the chair.
- Maximum load 100 kg. Use the chair on flat, firm, stable ground.


1 Unfold both arms

Lay the folded chair down as shown. Lift each armrest up and over, one side then the other, until both stand straight up.

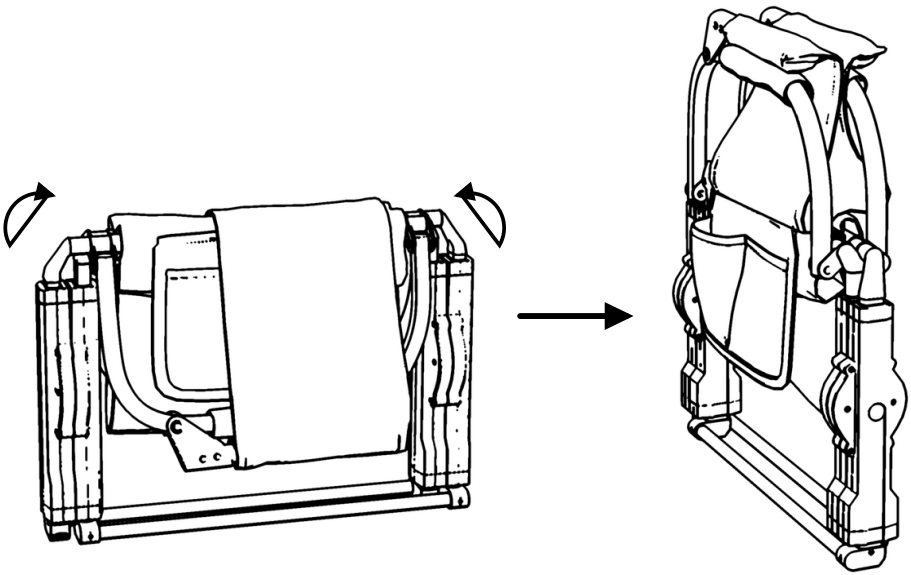


2 Stand it up and pull it to full height

Stand the chair upright. Put one foot on the foot bar to hold it down, then pull both armrests straight up until the legs are fully extended and stop.

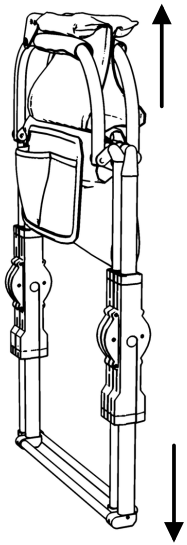


3 Spread the frame

Pull the two sides apart until the X-frame is fully open and the seat cloth is tight.

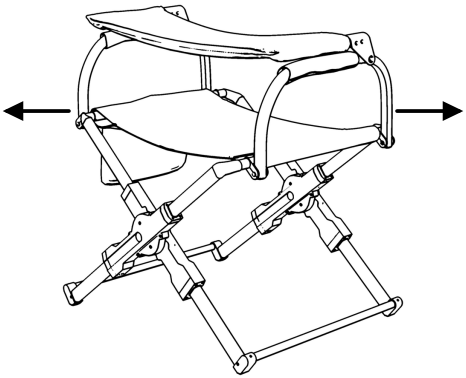

4 Lift the backrest

Lift the backrest up until it is upright. The chair is ready to use.

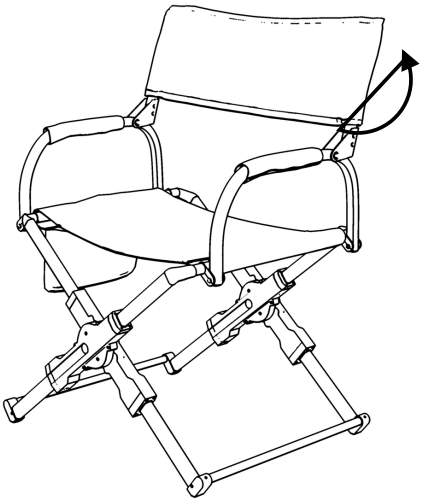

To fold

Do the steps in reverse: fold the backrest down onto the arms, push the two sides together, put one foot on the foot bar and push the armrests down, then fold the arms in flat.

Safe use

- Maximum load 100 kg. The chair is for one adult.
- Open the chair fully, with the seat cloth tight, before you sit.
- Do not stand on it, rock or tip back on two legs, or sit on the arms or back.
- Check the joints, hinges and cloth before each use. If anything is bent, cracked, loose or torn, stop using the chair and email hello@xakre.com.
- Wipe clean with a damp cloth and mild soap. Let it dry completely before you fold it away, and store it indoors.